



APS

Installer Tool ArrayApp (iOS)

Operation Manual

Version: 1.0
Copyright 2014 © Altenergy Power System, Inc.

Table of Contents

Introduction	1
To Sign onto ArrayApp	1
To Add a New Customer.....	2
Step 1: Configure Customer Information.....	3
Step 2: Configure ECU Information	6
Step 3: Configure Group View and Inverter Information.....	7
Step 4: Sync to EMA	15
Managing Customer Accounts	16
To Edit/Complete an Incomplete Registration	16
To Delete a Customer	18
To Export the Inverters	19
Managing Your Own Configuration Settings	22
To Configure the ECU Time Zone Setting	23
To Configure the Group View Setting	23
To Configure forFast Scan or Camera Scan.....	24
To Configure Language	25
To Scan UIDs By the Native Camera	26
To Use a Third Party Scanning Device	28

Introduction

ArrayApp is designed to help installers register accounts on EMA quickly via their iOS smart phone devices. Using the ArrayApp application, installers can complete the registration while on the construction site, and customers can access their EMA account in real time.


ArrayApp connects to the EMA via a Wi-Fi / GPRS connection.

To Sign onto ArrayApp

1. iOS (Requires 7.0 or above):


- Search for ArrayApp in the App Store.
- Download the Application (ArrayApp) and install on your smart devices.

The first time you sign onto the application, you will be asked to enter your EMA account and password.

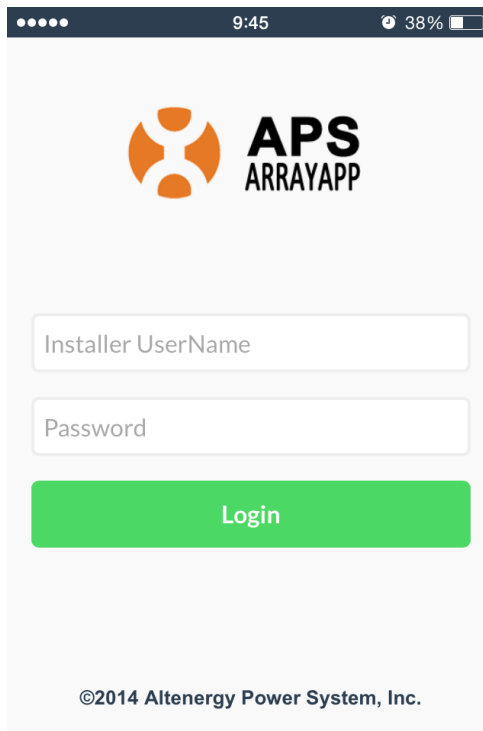

2. Enter your User Name.
3. Enter your Password.
4. Press the Login button.

You'll be offered the opportunity to login and work "On" or "Off" line once you have successfully logged into the application for the first time.

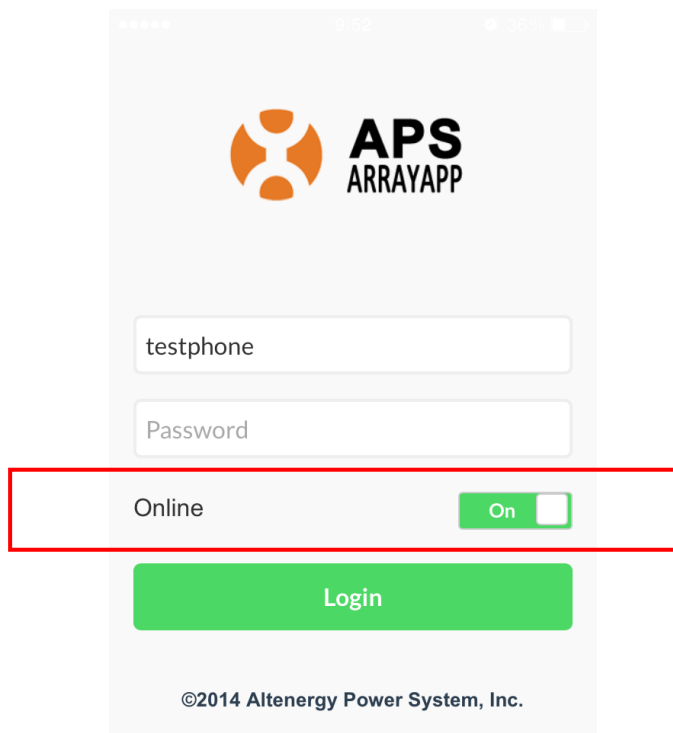

5. Toggle "On" or "Off".

Login Offline: If you choose to login offline, ArrayApp stores the information you enter and you can sync it to the EMA when connected to the Internet.

Note: You will be asked to fill in your password when you login offline and want to sync the installations into the EMA.

To Add a New Customer

There are four major steps involved in adding a new customer to the EMA:

Step 1: Configure customer information

Step2: Configure ECU information

Step3: Configure group view and inverter information


Step 4: Sync to EMA

Step 1: Configure Customer Information


1. Sign onto the ArrayApp.



ArrayApp displays your customer list.

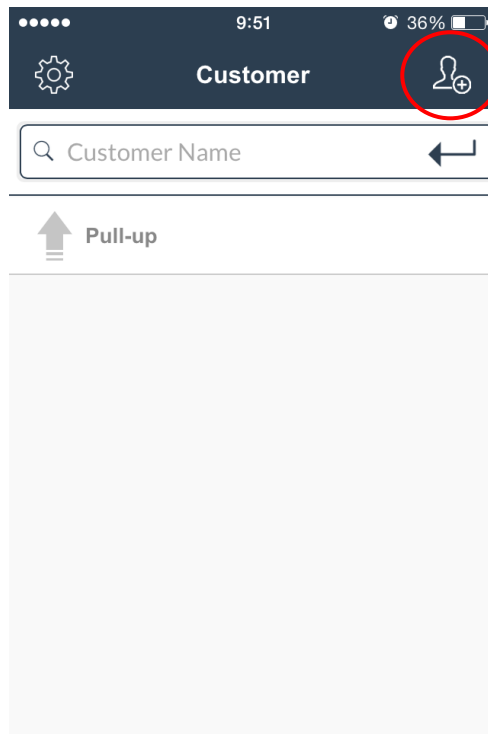2. Select the right upper icon.

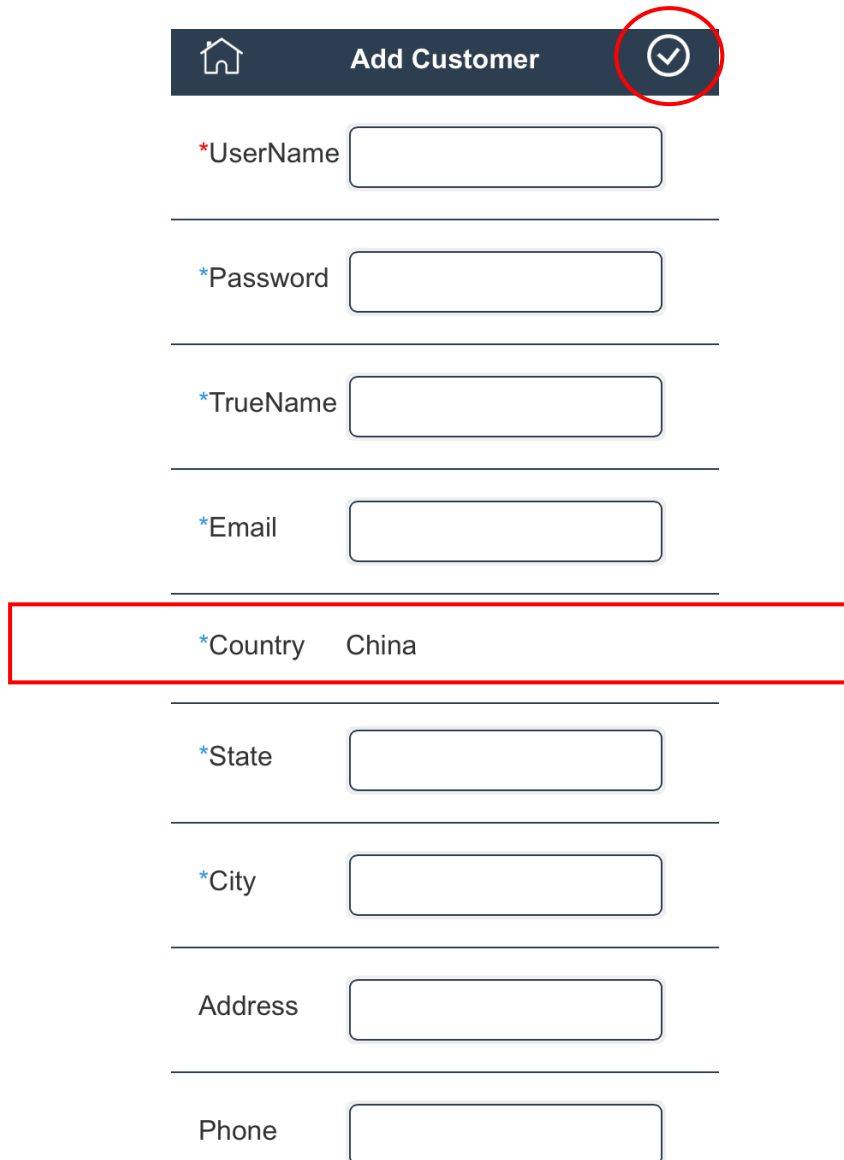

The new registration page is displayed.




Add Customer


*UserName

*Password

*TrueName

*Email

*Country China

*State

*City

Address

Phone

Note: The country name is auto-populated based on the information entered in your setting in the EMA.

3. Fill in the customer details.

UserName: This is a single “name” that will identify this specific customer’s installation. The UserName is not case sensitive. (Required)

Password: This is a temporary password that your customer can use to access their EMA account. Your customer can change the password should they so choose. (Required)

TrueName: This is your customer's full/true name. **(Required)**

Email: This is your customer's email address. This is used to email password notification(s), etc. to your customer. APS also uses this email address to send your customer system related notifications. **(Required)**

State: Customer's state. **(Required)**



City: Customer's city. **(Required)**

Address: Customer's street address. (Optional)


Phone: Customer's phone number. (Optional)

Note: You can fill in the "UserName" and then go on to the next steps if you don't have access to all of the customer's information, then go back later to refill in the rest of the needed information.

4. Press the icon  in the upper right corner of the screen to save the entered information.

Note: Once you have pressed , your customer information is saved in the system and you can step away from the process and resume by selecting  (See the details on "Managing Customer Accounts").

The ECU Configuration page is displayed.

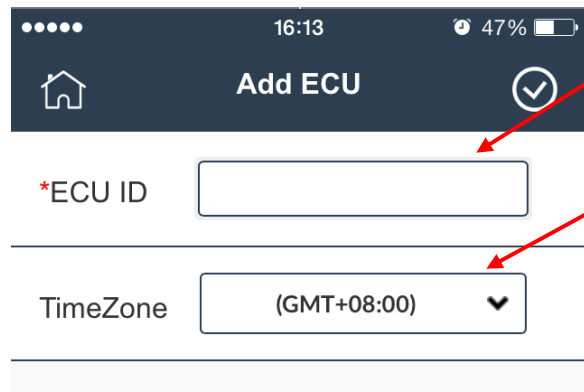

ECU UID Field

Time Zone Field

Step 2: Configure ECU Information


5. Enter the 12 digit ECU ID number(s) into the ECU UID field.

The ECU ID number is located on the top of the ECU, as well as on the front flap of the shipping box.


Note: The ECU ID number is a unique APS “software serial number” that is assigned to the ECU during manufacture. It is **NOT** the IP Address of the device.

It is **critical** that you enter the ECU ID correctly because the EMA uses this number to identify the system it is monitoring.

ECU ID Number on top of ECU

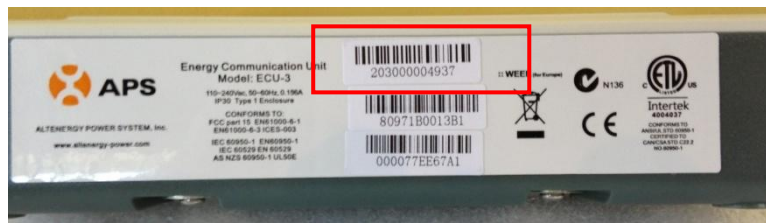

ECU ID Number on front flap of shipping box

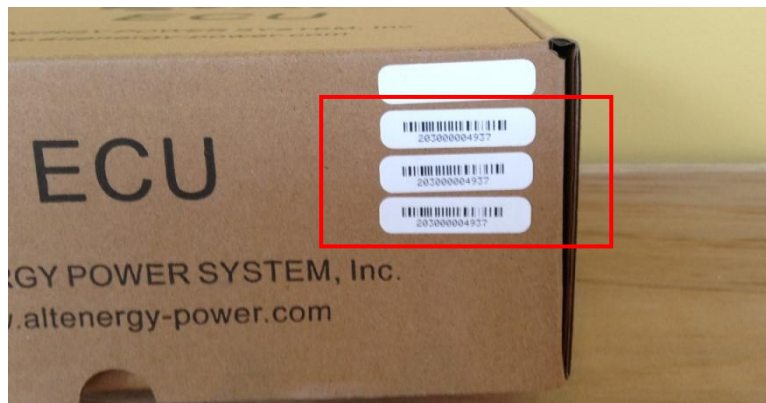

6. Select Time Zone where ECU is located.


Note: Configure the default Time Zone to make sure it matches most of your customers (See the details on “To Configure the ECU Time Zone Setting”), which will simplify your registration work.

7. Switch on/off Bluetooth using native Bluetooth Toggle.

Switch on native Bluetooth if a scanner is available fill in the Inverter ID in the next page “Add Inverter”(See the details on “To Use a Third Party Scanning Device”).

8. Press the icon  in the upper right corner of the screen to save the entered information.

The layout and inverter configuration page is displayed.

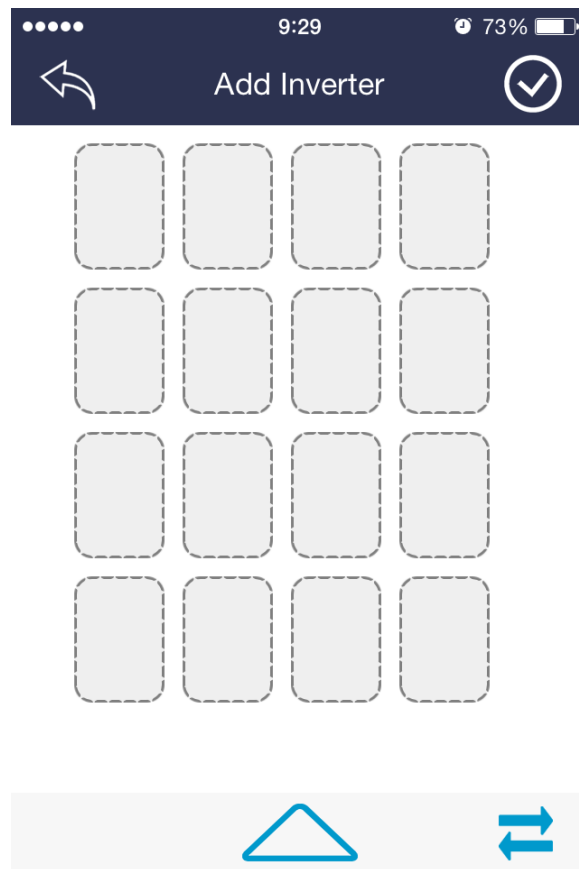

Step 3: Configure Group View and Inverter Information

The Inverter ID numbers are located the top of the inverter, as well as the back flap of the shipping box (see next page).

Note: Configure the default Row or Column to make sure it matches most of your customers (See the details on “To Configure the Group View Setting”).



Inverter ID Number on the top of the inverter




Inverter ID Number on back flap of shipping box



9. Add the Inverter into the Right Location


Click the panel where the inverter you want to add is located, enter the Inverter ID and press  on the icon  to save.

R:1, C:1

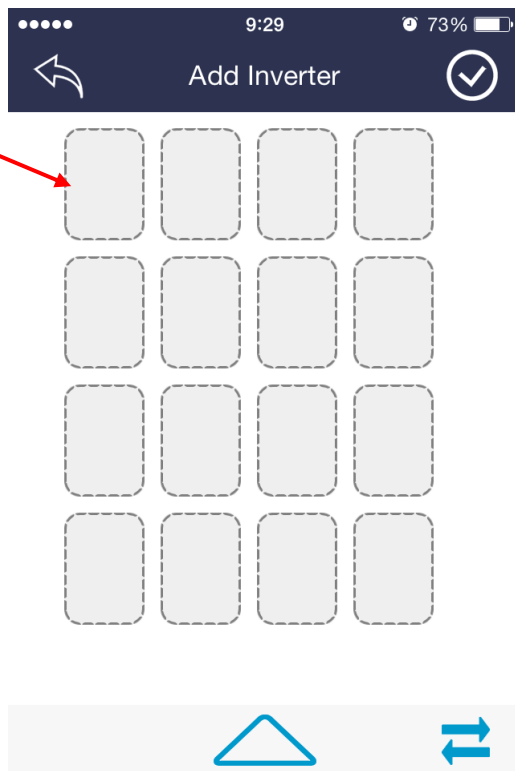

Note: “R” indicates the row where the panel is located. “C” indicates the column where the panel located. In the case above, panel is located in position R:1, C:1.

The “Add Inverter” functionality screen is displayed when you click on the panel location.

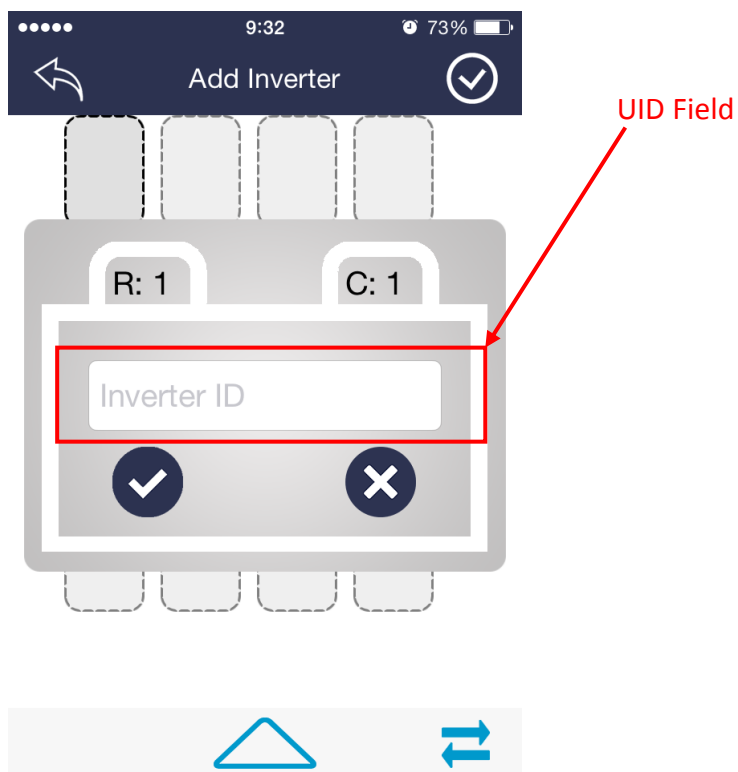



: Save the UID you entered.






: Do not save the UID you entered.

Press and hold down on a panel with an inverter assigned to configure the inverter Information:


- (1) Change Orientation: Press and hold down on a panel, select the button “Rotation” in the selector. Vertical is default. Purple indicates the orientation is vertical, blue indicates the orientation is horizontal.
- (2) Change Channel: The YC500 has two channels; A and B. The YC1000 has four channels; 1, 2, 3 and 4. When you enter an inverter UID, the application automatically selects a channel for this inverter. If the system chooses the incorrect channel, press and hold down on a panel, select the button “Change Channel” in the selector to change the channels. The channel is no longer an option once it has been successfully entered into the database.
- (3) Delete Inverter: Press and hold down on a panel, select the button “Delete”.

To exchange the panels’ location

Click on the “Exchange Location” button to open the switching function. The icon  will change to .

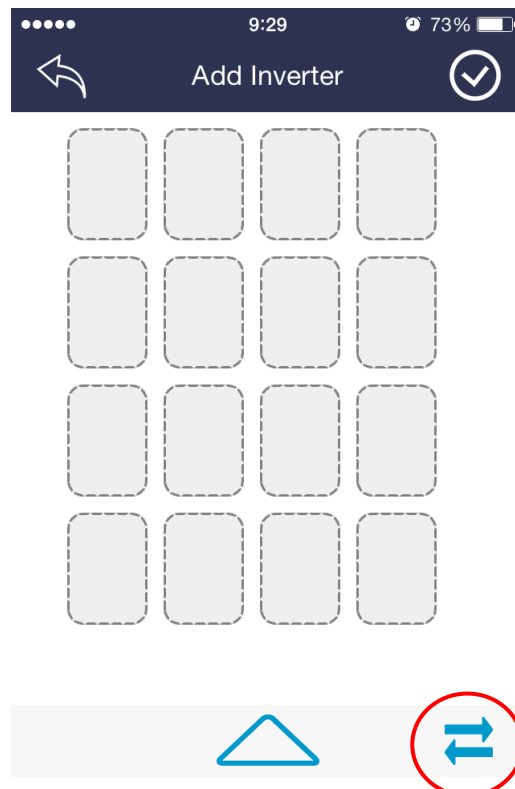

Exchange Location


Pressing on the two panels in turn and their locations will be swapped. After you have exchanged all the inverters you want to, click on the  button to close the switching function.

Note: You can only exchange inverter locations in switching function.


To Add Columns and Rows to Your System

There will be times when you need to expand on the preconfigured number of panels and their associated inverters. To do this:

Click on the button at the bottom of the Add Inverter page.

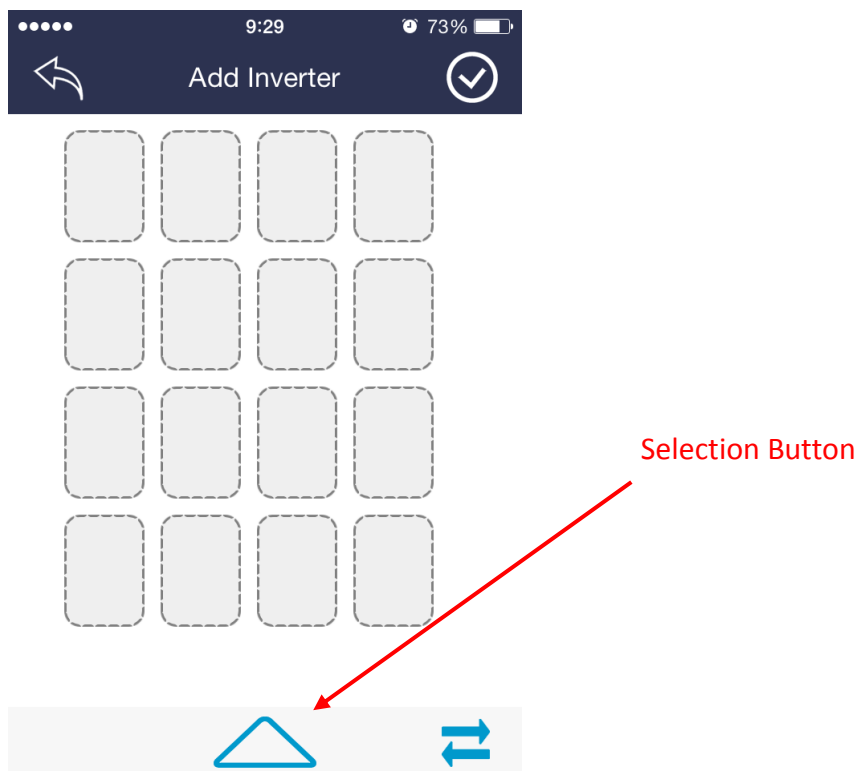

The Add Column/Row Selector is displayed.

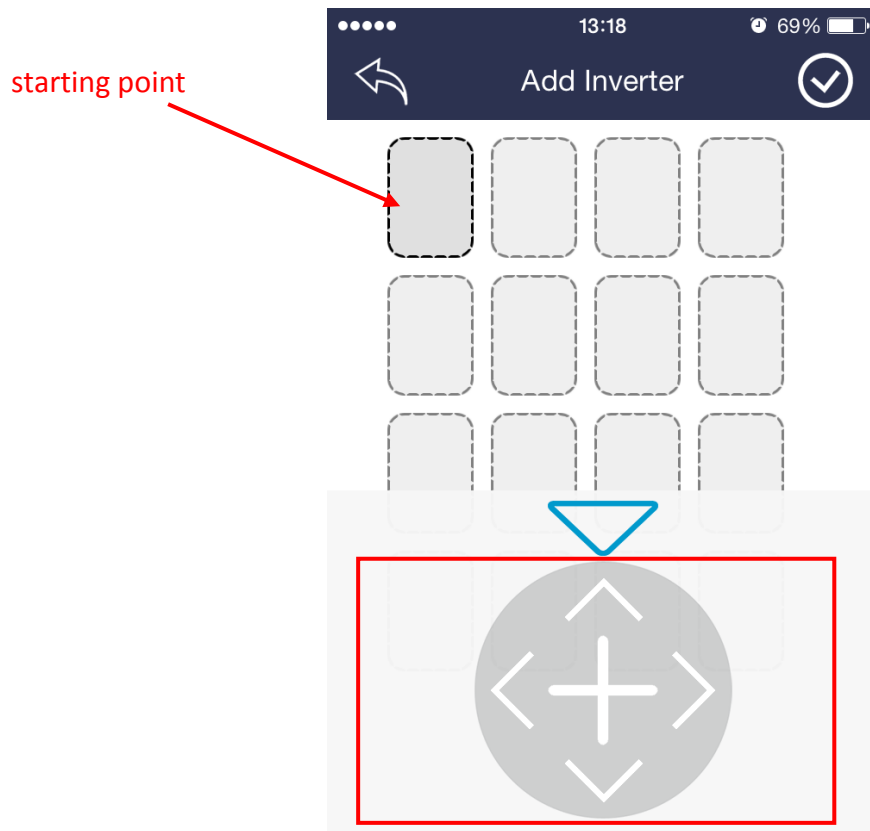

The plus sign indicates you are in the “Add” mode.


Before you enter the “Add” mode, you should select a “starting point” panel first, and then using the arrows on the Add Column/row selector add rows or columns as needed.

Once you have finished, click the arrow above the circle to hide this functionality.

To Delete Columns and Rows from Your System


Select the plus sign in the middle of the Add Column/Row Selector. The Plus is replaced by a minus sign, indicating you are in “Delete” mode.


starting point

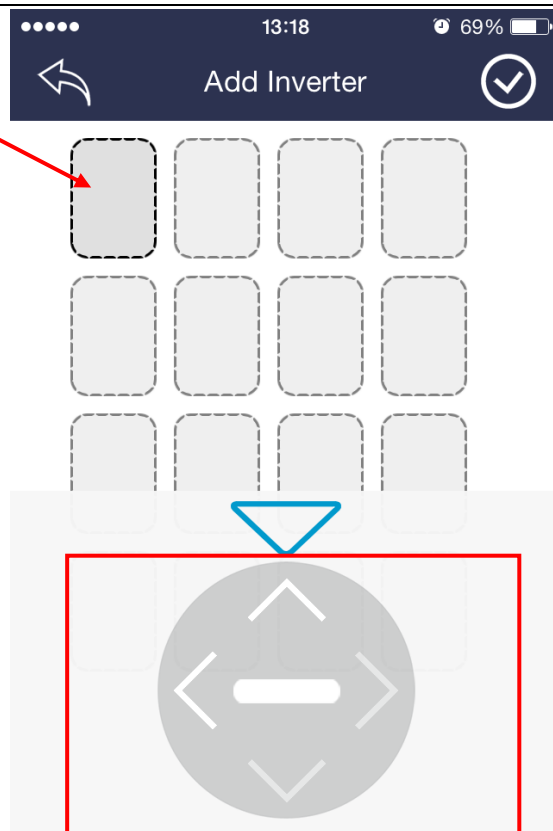

Before you enter the “Delete” mode, you should select a “starting point” panel first, then using the arrows on the Add Column/row selector delete rows or columns as needed.


Once you have finished, click the arrow above the circle to hide this function.

9. Press the icon  in the upper right corner of the screen to save the entered information.

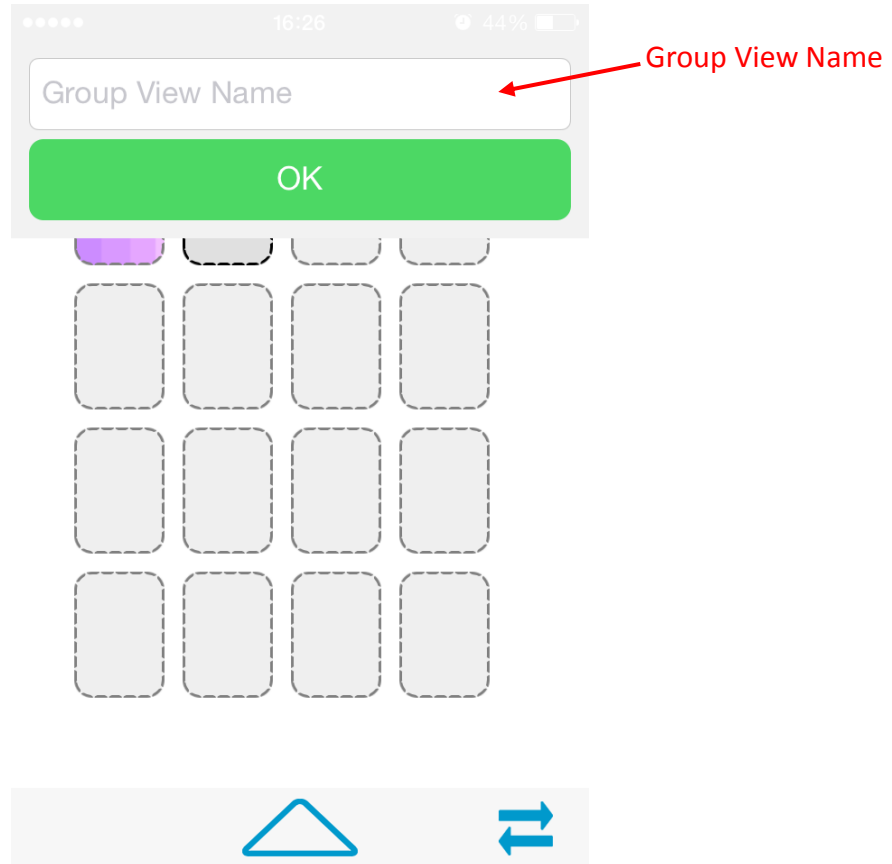

10. Enter the “Group View Name” and click “OK” to save the group view.

The registration information list page is displayed.

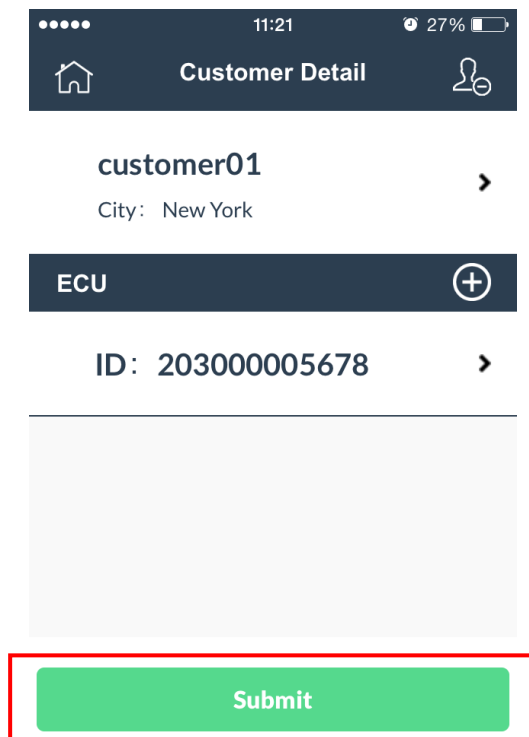


Step 4: Sync to EMA


11. Press the “Submit” button.


After you finish steps 1-3, press “Submit” to sync to the EMA.

Note: Make sure you have an Internet connection when attempting to sync to the EMA.

The Customer List is displayed (see next page).

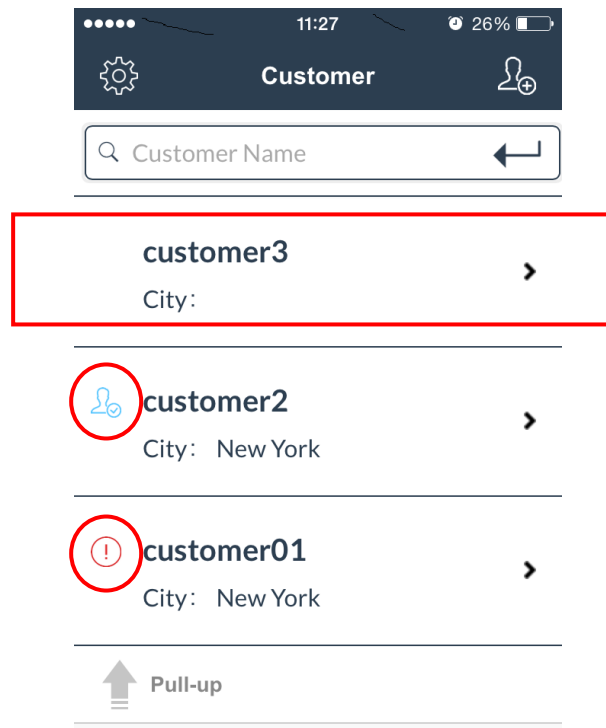


 This icon indicates the customer has been successfully synced to the EMA. Once synced with the EMA, you can no longer edit using the ArrayApp application, but can do so using the EMA directly.

 This icon indicates the customer’s information has errors or failed to sync to the EMA. If this occurs, make sure all the information is correct and that you have a good Internet connection, and resubmit. **Note:** Press on this customer to check their information. Error message are indicated in red.

Note: The customer without any sign on the customer list indicates his information is incomplete, or his information hasn’t been synced to EMA (see “Customer 3” on previous page).

Managing Customer Accounts


Once you have pressed  for any of the major steps (1-3), your customer's information is saved in the system and you can step away from the process and resume from the customer list.

To Edit/Complete an Incomplete Registration

1. Sign onto the ArrayApp.

ArrayApp displays your customer list.


2. Search for the customer you want to edit/complete by entering their UserName or by scrolling through the list.

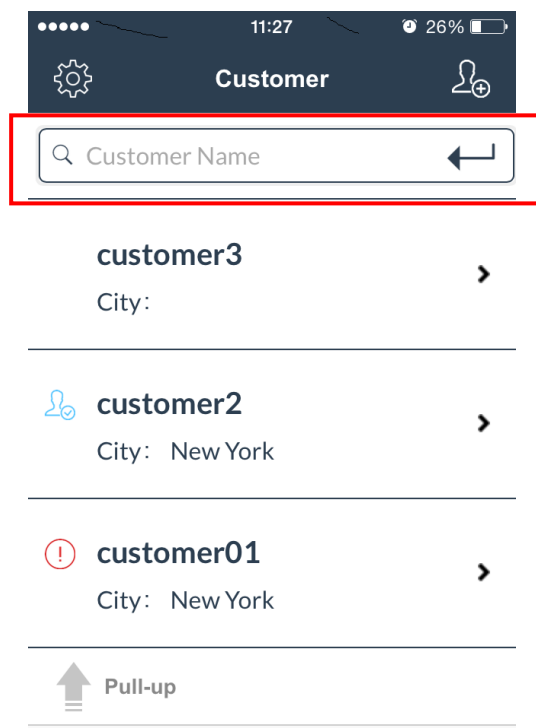

3. Select the UserName.


The customer's detail page is displayed (see next page).

UserName

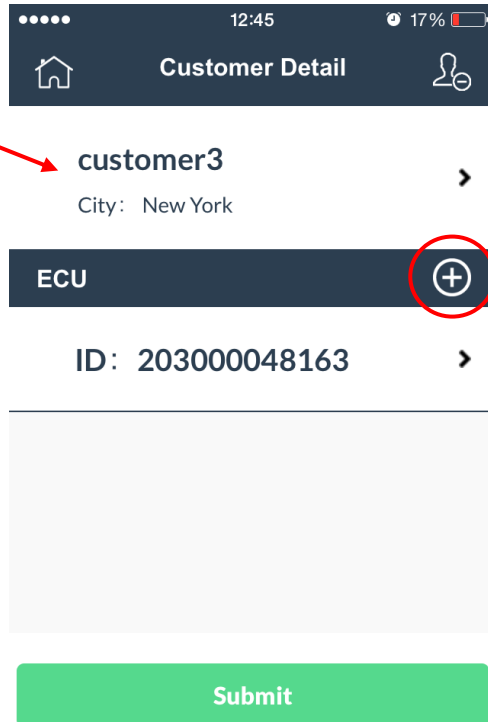

- Press on the “Plus” icon to add an additional ECU to the customer account.
- Select UserName to edit the customer’s personal information.
- Press on the ECU ID to edit the ECU information.
- Select the ECU ID field to edit the ECU UID.
- Press the “Plus” icon next to Group View to add an additional Group View for this ECU.

ECU ID Field

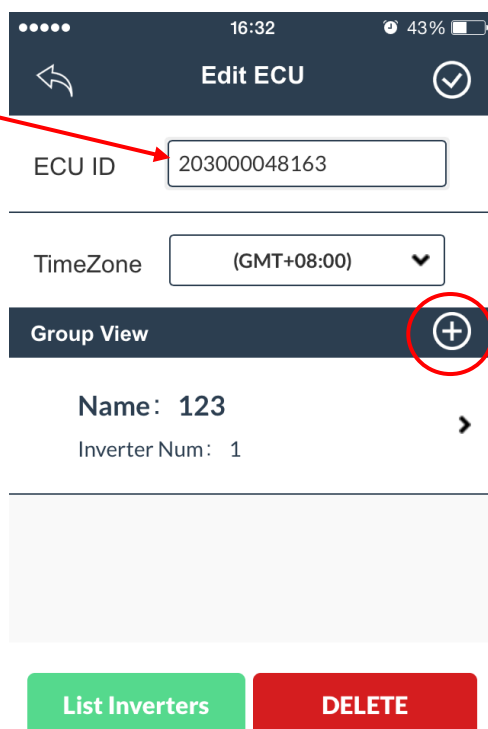


To Delete a Customer

1. Sign onto the ArrayApp.


ArrayApp displays your customer list.

2. Search for the customer you want to delete by entering their UserName or by scrolling through the list.

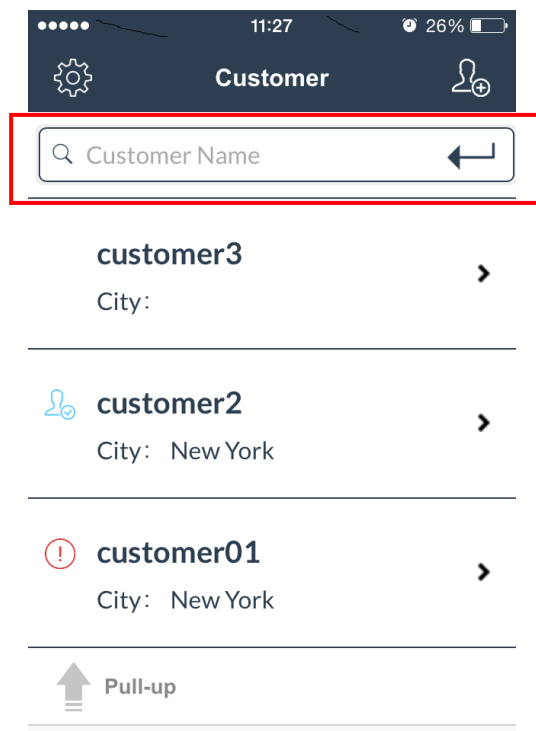

4. Select the UserName.

The customer's detail page is displayed (see next page).

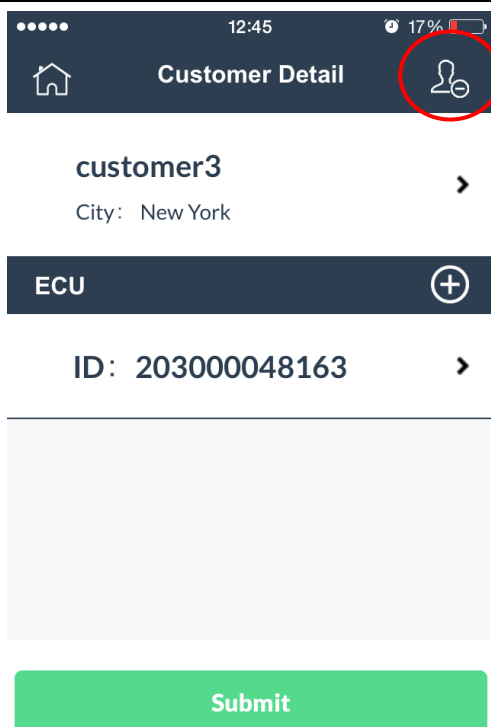

4. Press on the right upper icon to delete this customer.


Note: Customers synced to the EMA will not be deleted from the master online EMA database.

To Export the Inverters

1. Sign onto the ArrayApp.


ArrayApp displays your customer list.

2. Search for the customer where you want to export the inverters by entering their UserName or by scrolling through the list.

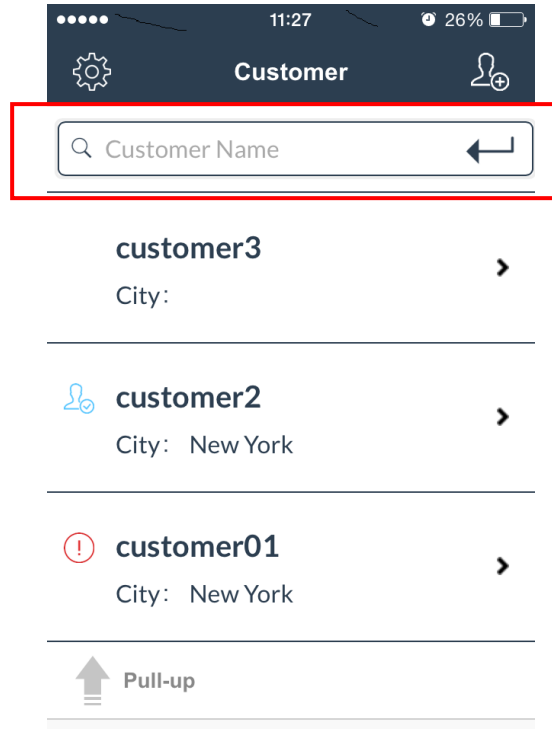


3. Select the UserName.

The customer's detail page is displayed.

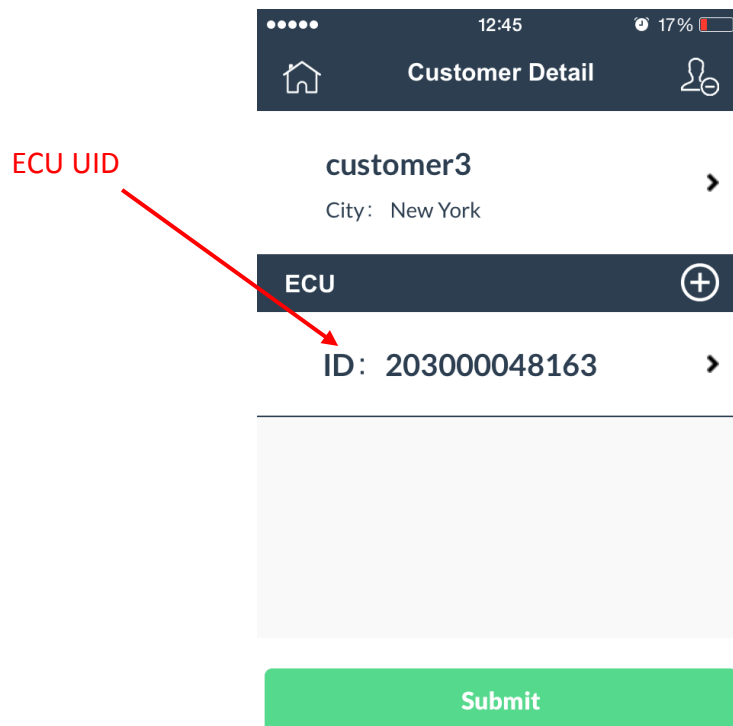

4. Press on the ECU where you want to export the inverters.

The Edit ECU page is displayed.

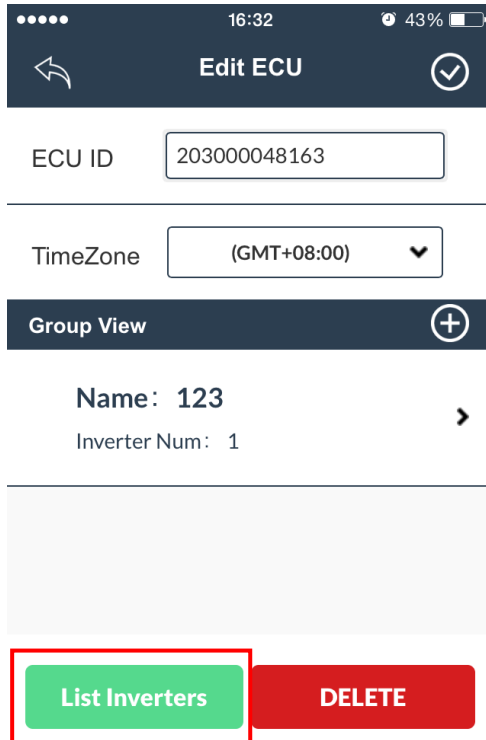

16:32 43%

← Edit ECU →

ECU ID 203000048163

TimeZone (GMT+08:00) ▼

Group View +


Name: 123 >

Inverter Num: 1

List Inverters DELETE

5. Press on the “List Inverters” button.

The list of inverters associated with this ECU is displayed.

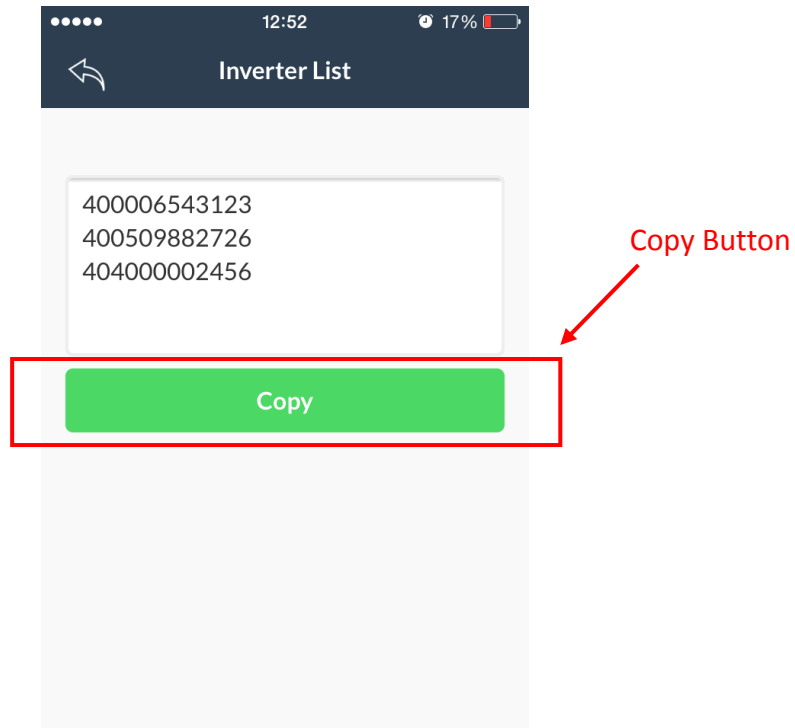

12:52 17%

← Inverter List →

400006543123
400509882726
404000002456

Copy

Copy Button


6. Press the Copy button.

Note: The copy function allows you to “copy and paste” to another application on your mobile device.

Managing Your Own Configuration Settings

1. Sign onto the ArrayApp.


ArrayApp displays your customer list.

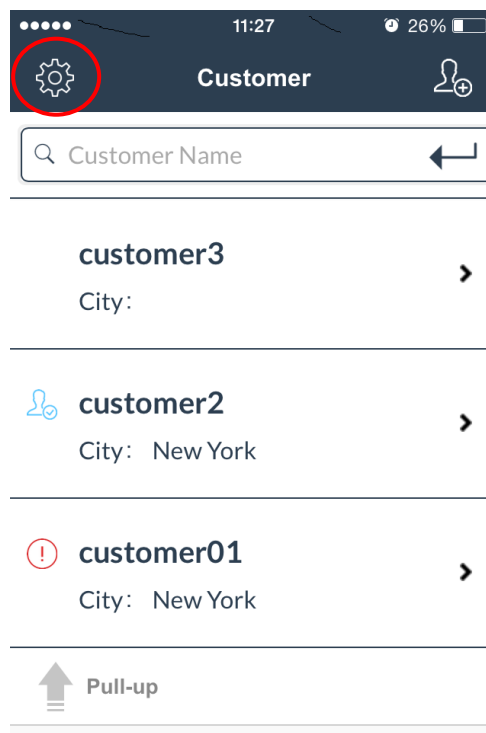

2. Select Configuration/Settings icon in the upper left corner of the page.

Your personal configuration/settings page is displayed (see next page).


Note: If you have several installer accounts, press on “Change installer” button to login on another installer account.

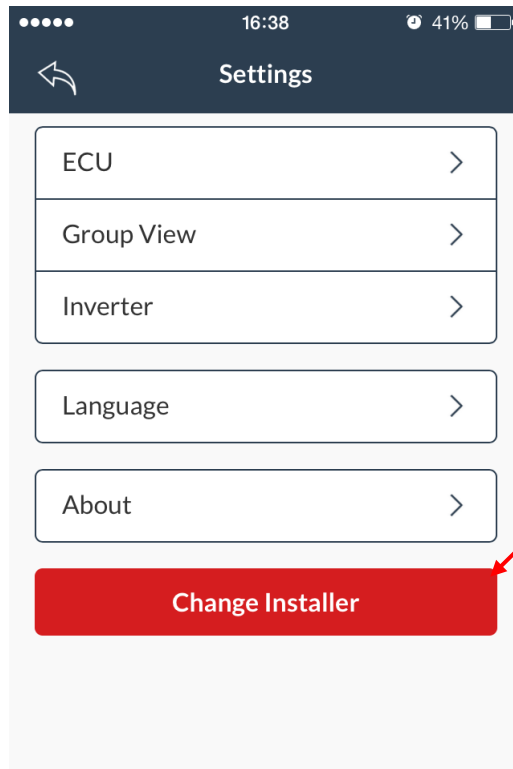

To Configure the ECU Time Zone Setting

1. Press on the ECU on the Configuration/Settings page.

The ECU Time Zone page is displayed.

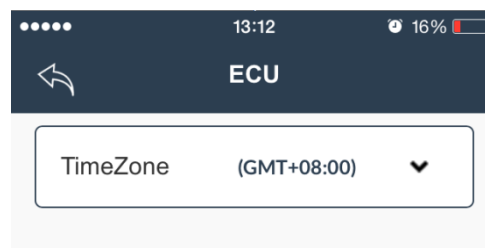


The ECU time zone is the default on the ECU page. Make sure the time zone in your settings matches most of your customers so the system can simply your customer registration process.

To Configure the Group View Setting

1. Press on the Group View on the Configuration/Settings page.

The Group View page is displayed.

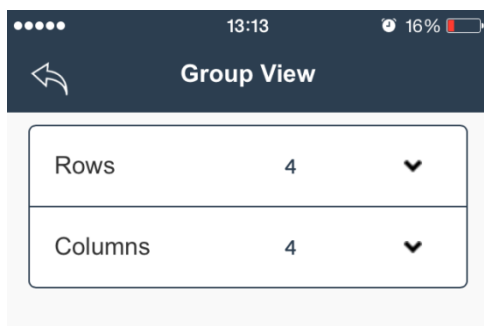


The Row and Column is the default row and column on the “Add Inverter” page. Make sure the Group View in your settings matches most of your customers so the system can simply your customer registration process.

To Configure for Fast Scan or Camera Scan


Faster Scan is used to assist you in entering the inverter UIDs in an order that suits the way you work. “Horizontal” means will organize the panels along the horizontal plane. “Vertical” means the organization is vertical.

1. Press on the Inverter on the Configuration/Settings page.

The Inverter page is displayed.

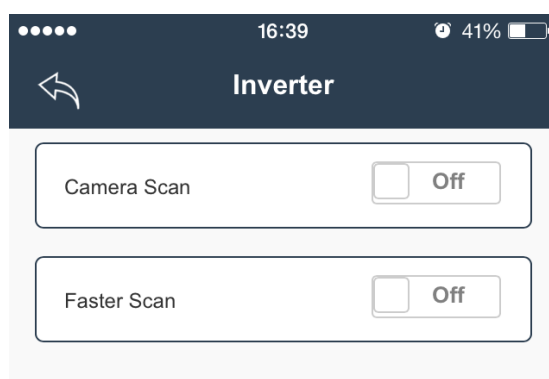


Note: The Faster Scan functionality and the Camera Scan functionality are in the OFF position by default.

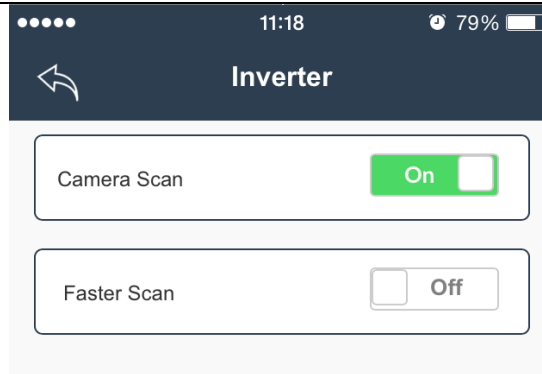

2. Toggle the Camera Scan functionality On or Off.

Toggling On the functionality gives you the capacity of scanning UIDs by native camera.

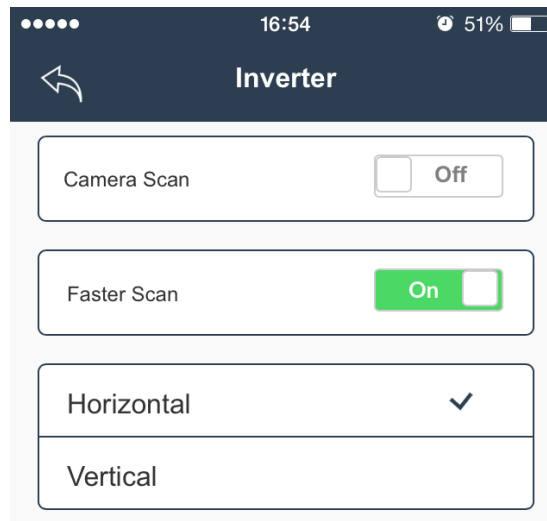


3. Toggle the Faster Scan functionality On or Off.

Toggling On the functionality gives you the option of working either vertically or horizontally.

To Configure Language

1. Press on the Language on the Configuration/Settings page.

The Language selection page is displayed.

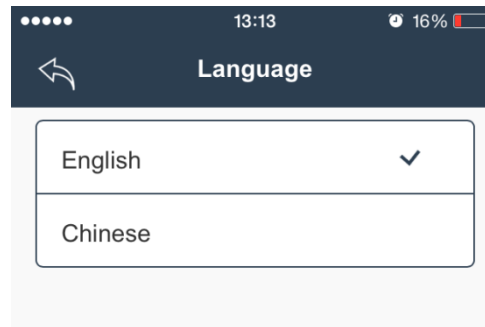


2. Choose the language you want to use.

To Scan UIDs By the Native Camera

1. Sign onto the ArrayApp
2. Switch ON “Camera Scan” (see the details on “To Configure for Faster Scan or Camera Scan”).

Note: Switching on both “Camera Scan” and “Faster Scan” allows you to scan in the inverters faster.


3. Get to “Add Inverter” page or “Edit Inverter” page.

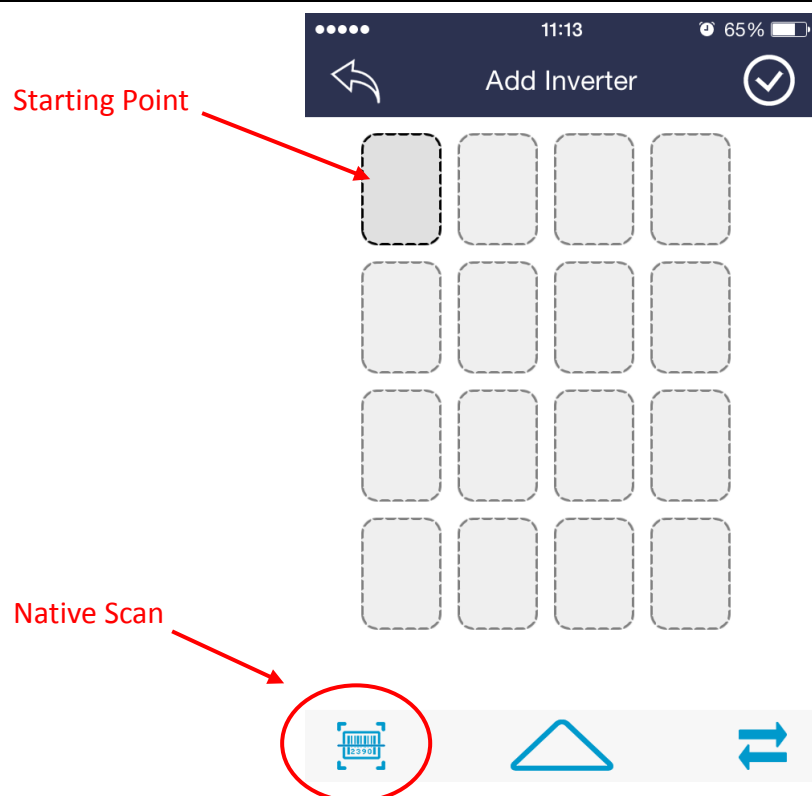

Press on the “Camera Scan” button to scan the UIDs. “R” indicates the row where the panel is located. “C” indicates the column where the panel is located.

Note: If you only toggle On the “Camera Scan” in the configuration settings, you should select a starting point before scanning inverters.

Note: Slide the panel list left or right to choose the panel location you want to scan the UIDs into.

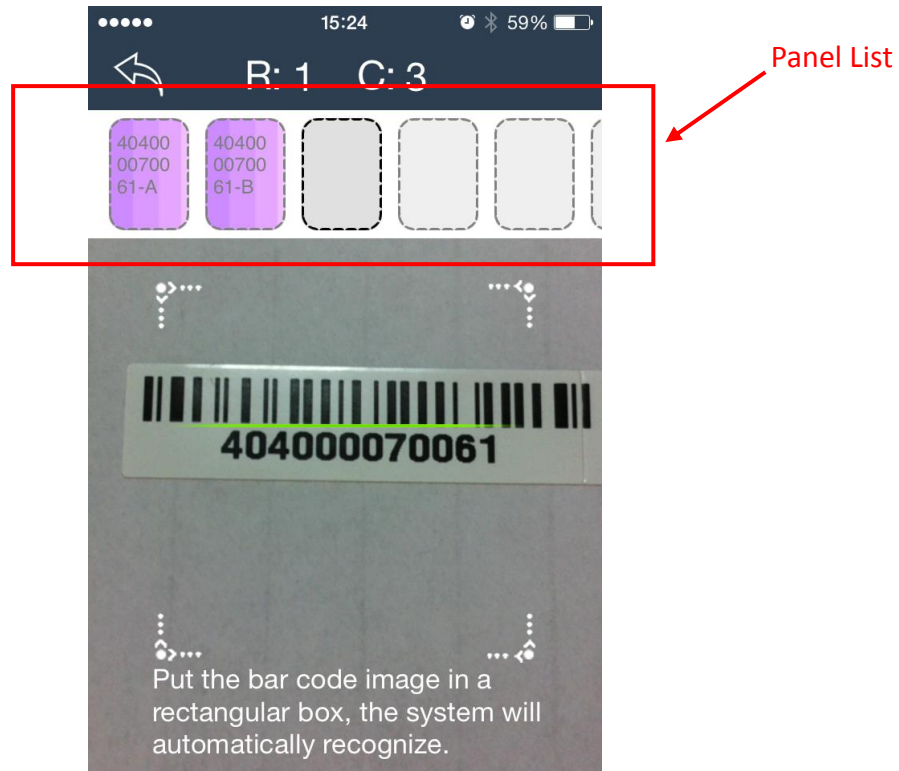

To Use a Third Party Scanning Device

Preparation: Using Bluetooth, set up the scanner and pair it with your iOS device. The scanner can only be paired with one device at a time.

Test the Bluetooth connection between your scanner and mobile device before attempting to use it for registration purposes. Once fully tested, use the scanner with the Faster Scan functionality to significantly reduce the amount of effort involved in registering your systems.

Note: If your device has been connected to the scanner, the keyboard on your mobile device may disappear. Switching off Bluetooth will reactivate the keyboard.

Note: Refer to the scanner manufacturer's documentation regarding specific Bluetooth requirements.

1. Sign onto the ArrayApp.
2. Switch ON "Faster Scan" (see the details on "To Configure for Faster Scan").

When Adding ...

3. Get to “Add ECU” page (see the details on “Step 2: Configure ECU Information”).

The Add ECU page is displayed.




4. Switch “ON” Bluetooth using the native Bluetooth Toggle.

When Editing ...

3. Get to “Edit ECU page or “Edit Group View page”(see the details on “To Edit/Complete an Incomplete Registration”).

The Edit ECU page is displayed.

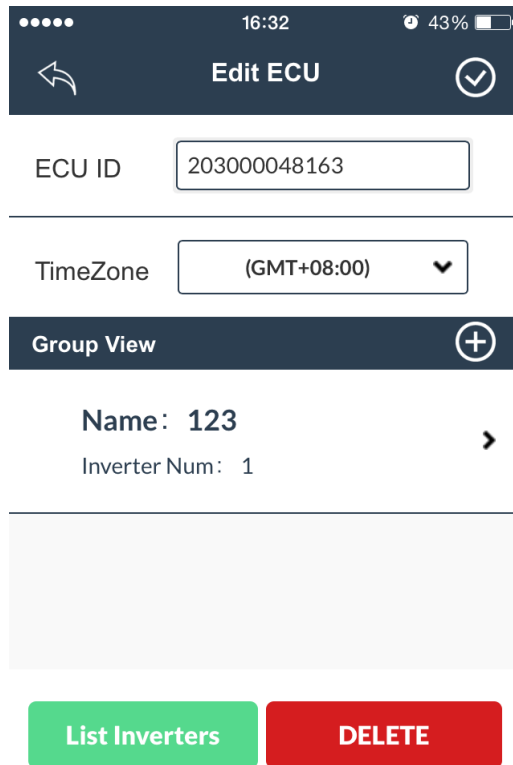

16:32 43%

← Edit ECU ✓

ECU ID 203000048163

TimeZone (GMT+08:00) ▼


Group View (+)

Name: 123 >

Inverter Num: 1

List Inverters DELETE

The Edit Group View page is displayed.

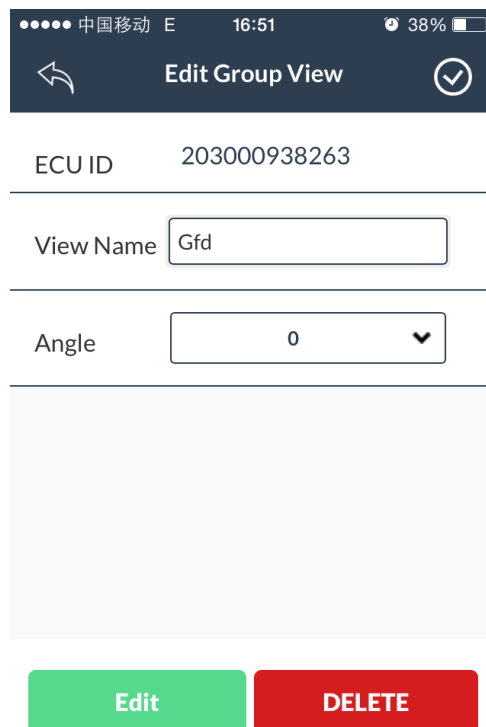

中国移动 E 16:51 38%

← Edit Group View ✓

ECU ID 203000938263

View Name Gfd

Angle 0 ▼

Edit DELETE

4. Switch “ON” Bluetooth using the native Bluetooth Toggle.